


NOTES :

- 1 WHERE WATER AND SEWER MAINS CROSS, A FULL JOINT OF PRESSURE TYPE SEWER PIPE MUST BE USED AND IS TO BE CENTERED ON THE WATER PIPE
- 2 FOR 15" SEWER PIPE, USE P.V.C. S.D.R. 26 D3034 SEWER PIPE AND COMPLETELY ENCASE THE SEWER PIPE A MIN. OF 9' EACH SIDE OF THE CROSSING WITH SAND CEMENT BACKFILL.

\*\*IF NO TAPS INVOLVED, C900 CAN BE USED FOR SEWER PIPE IF WATER AND SEWER ARE CLOSE TOGETHER. NO ENCASEMENT NECESSARY.

DETAIL  
WATER LINE CROSSING

NTS

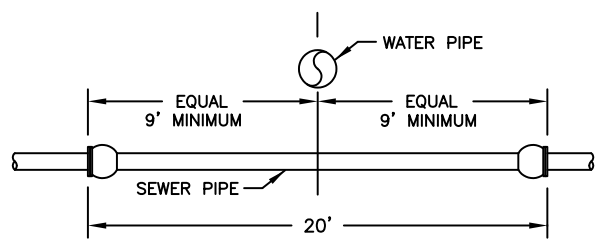

WATER SEWER CROSSING DETAIL  
NOT TO SCALE



CITY OF SULPHUR SPRINGS  
DEVELOPMENT MANAGEMENT MANUAL  
DETAIL DRAWINGS  
  
SEWER/WATER CROSSING  
DETAIL

SCALE: NTS  
DATE: 12.09.2013  
DR. BY:  
CK. BY:

DRAWING NUMBER  
**FIG.-2.09**